



vocom

VIRTUAL OFFICE COMMUNICATIONS



Provisionamento Yealink


Provisionamento Yealink

Provisionamento



O PABX permite a configuração automática (provisionamento) dos aparelhos Yealink.

Abaixo o passo a passo para o provisionamento. As telas podem variar de acordo com a versão do aparelho.

a. Ir em Contas -> Aparelhos IP

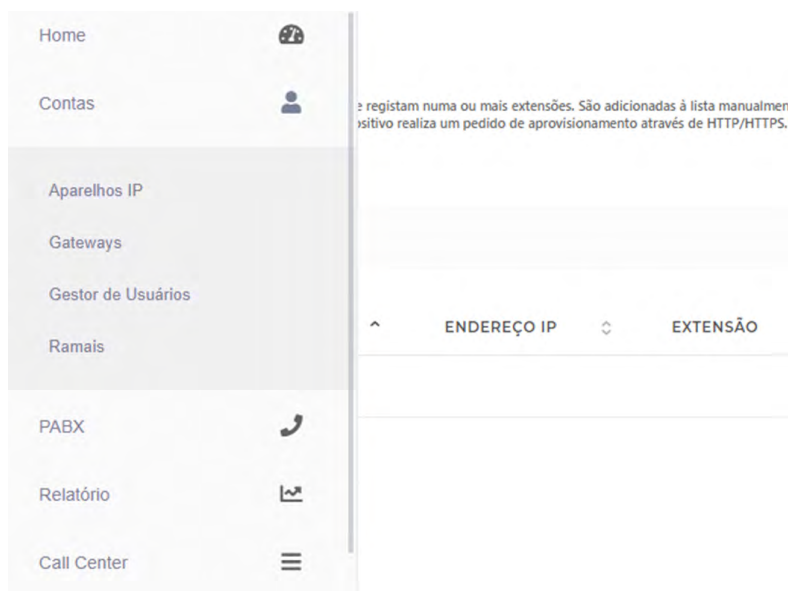

 b. Clicar no botão

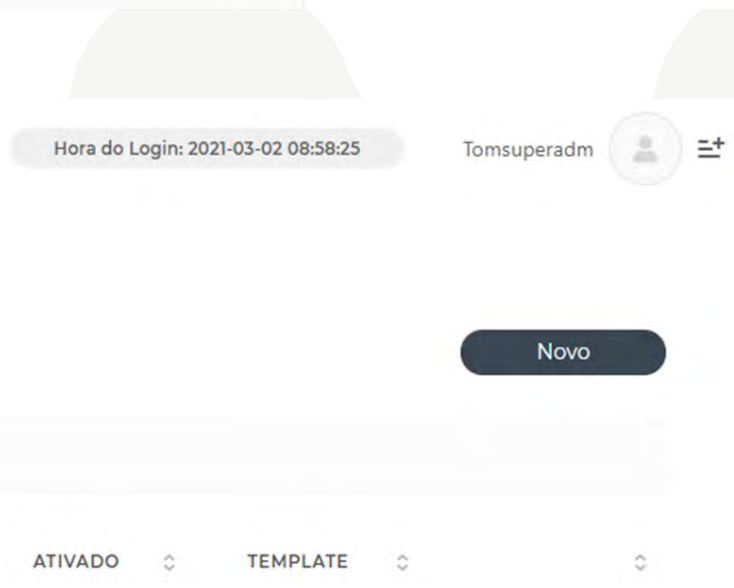



Provisionamento Yealink

Provisionamento

b. Inserir o número MAC no aparelho IP, a Linha e o Ramal.

Se achar necessário, coloque uma descrição. Clique em

Salvar

ENDERECO MAC
001565d08b6f

Linhas

LINHA
1

RAMAL
2003

ATIVADO



DESCRIÇÃO
Ramal Yealink

AVANÇADO

Voltar

Salvar

Voltar

Salvar

Provisionamento Yealink

No aparelho Yealink

- a. Faça o Reset de Fábrica
- b. Localize o IP dele através do visor indo em Menu -> Status
- c. Acesse-o via utilizando o navegador.

Os dados de acesso são:

Usuário: admin

Senha: admin

Caso os dados acima não acessem, procure no manual do aparelho os dados padrões de acesso.

- d. Após acessar o aparelho navegue para Settings e Auto Provision. Preencha a url `http://pabx.vocom.com.br/provision` sendo que `pabx.vocom.com.br` deve ser trocado pelo domínio do seu PABX.

Exemplo:

`http://pabx.vocom.com.br/provision`

`http://costumer.vocom.com.br/provision`

Clique em

Autoprovision Now



Provisionamento Yealink

No aparelho Yealink

The screenshot shows the Yealink T19 E2 web interface. The top navigation bar includes 'Status', 'Account', 'Network', 'DSSKey', 'Features', 'Settings', 'Directory', and 'Security'. The 'Settings' tab is active, and the 'Auto Provision' section is selected in the left sidebar. The main content area displays the following configuration options:

- PNP Active: On Off
- DHCP Active: On Off
- Custom Option(128~254):
- DHCP Option Value:
- Server URL:
- User Name:
- Password:
- Attempt Expired Time(s):
- Common AES Key:
- MAC-Oriented AES Key:
- Zero Active:
- Wait Time(1~100s):
- Power On: On Off
- Repeatedly: On Off
- Interval(Minutes):
- Weekly: On Off
- Time: : -- :
- Day of Week: Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday

At the bottom of the form are 'Confirm' and 'Cancel' buttons, and an 'Autoprovision Now' button. A 'NOTE' box on the right states: 'Auto Provision: The IP phone can interoperate with provisioning server using auto provisioning for deploying the IP phones. When the IP phone triggers to perform auto provisioning, it will request to download the configuration files from the provisioning server. During the auto provisioning process, the IP phone will download and update configuration files to the phone flash. You can click here to get more guides.'

Copyright © 1998-2021 **Inc. All Rights Reserved

Aguarde o aparelho reiniciar.



Av. das Nações Unidas 18801 cj 18-24
Santo Amaro, São Paulo/SP
www.vocom.com.br



vocom
VIRTUAL OFFICE COMMUNICATIONS